



# LCD Screen Replacement

How to replace the LCD display screen.

Written By: Colton Lancsarics



## INTRODUCTION

In this guide, you will be taught how to successfully replace the LCD screen on your camera.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [JIS Driver Set](#) (1)
-

## Step 1 — Battery Door



- Remove the M3 x 4mm screws from the bottom of your device as indicated by the picture. using the Philips Head J0 Screw Driver Bit .

## Step 2



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the left side of the device as indicated by the pictures.



### Step 3



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the right side of the device as indicated by the pictures.

### Step 4



- Use your Philips Head Screwdriver to remove the M3 x 4mm screws from the camera flash lid as indicated by the picture.
- Remove the plastic cover from the flash lid by gentle pulling them apart or using the plastic opening tool.

## Step 5




- Fold the lid down in order to access and remove the final M3 x 4mm screw using your Philips Head Screwdriver.

## Step 6



- Use the plastic opening tool to pry the back and front casings of the camera apart.
- Once pried apart use your hands to pull off the back plate of the camera.
- You will need to apply a little bit of force to remove the back plate.

## Step 7

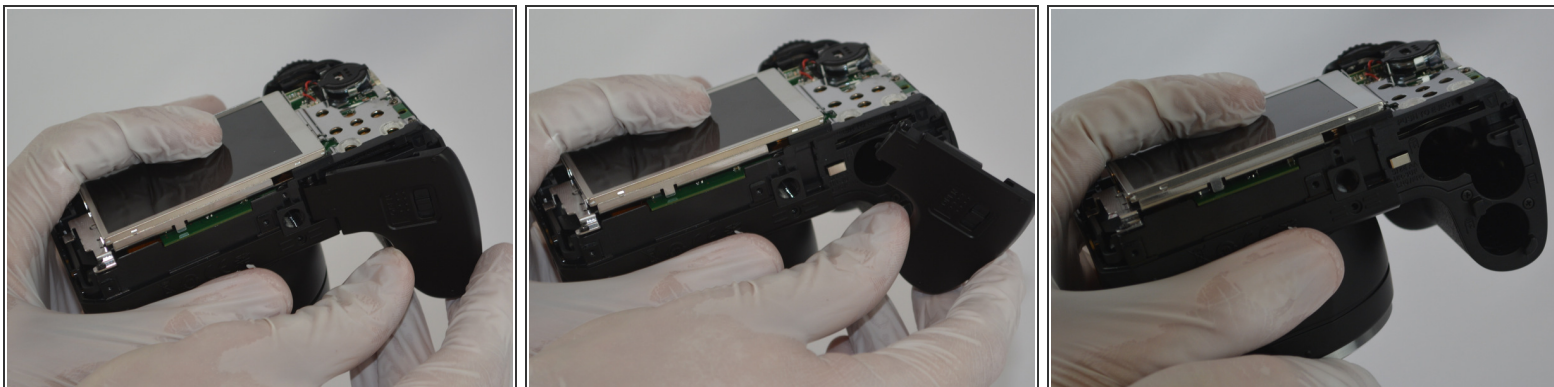

- Once the back plate is removed twist the battery cover clockwise and it should easily dislodge.

## Step 8 — LCD Screen



- Gently pull the tab out of the motherboard and then the LCD screen should easily be removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 07:58:38 PM.